



ShutdownAgent 2012

User Manual

Doc. Version 01.02

Date: 11/20/2015

About this manual

This manual contains information on installation and operation of the ShutdownAgent 2012 software.

Save this Manual

This manual contains instructions and warnings that should be followed during the installation, operation and storage of this product. Failure to heed these instructions and warnings will void the product warranty.


Contents

1. Overview.....	2
1.1 Features	2
1.2 OS Support.....	2
2. Installation/ Uninstallation	4
2.1 For Windows System	4
2.1.1 Installation Process.....	4
2.1.2 Uninstallation Process	7
2.2 For Linux System	8
2.2.1 Installation Process.....	8
2.2.2 Uninstallation Process	9
2.3 For IBM AIX System.....	9
3. Console Configuration	10
3.1 Console Menu	10
4. Operation in Windows	12
4.1 Web Monitor	12
4.2 Property.....	12
4.3 Show Countdown	15
4.4 Cancel Countdown	15
4.5 Stop Service	15
5. Web Interface	16
5.1 Run a Web Browser	16
5.2 Monitor >> Information >> Summary.....	17
5.3 Monitor >> Information >> Event Log	18
5.4 Monitor >> Information >> Log Configure.....	19
5.5 Device >> Host >> Configure	19
5.6 Device >> Host >> Control	23
5.7 Device >> Host >> Forward Trap	23
5.8 Device >> SNMP >> SNMP Access.....	24
5.9 Device >> SNMP >> SNMPv3 USM.....	24
5.10 System >> Administration >> Information	25
5.11 System >> Administration >> Login User	26
5.12 System >> Administration >> Web	27
5.12 System >> Administration >> Batch Configuration	28
6. 2008 Server Core Setup for ShutdownAgent	29
7. VMWare ESXi4.0 Setup for ShutdownAgent	31
7.1 Configure the Firewall for ESXi 4.0	31
7.2 Install VMware Tools for Guest OS	31
7.3 Configure ShutdownAgent for ESXi4.0	32
8. VMWare ESXi4.1, ESXi5 Setup for ShutdownAgent	33
8.1 Configure the Firewall for vMA	33

8.2 Install VMware Tools for Guest OS	34
8.3 Configure ShutdownAgent for ESXi4.1, ESXi5.....	34
9. XenServer Setup for ShutdownAgent	36
9.1 Install PV driver for Guest OS	36
9.2 Configure ShutdownAgent for Xen.....	36
10. Linux KVM Setup for ShutdownAgent.....	37
10.1 Install libvirt Tools for KVM	37
10.2 Configure ShutdownAgent for KVM.....	37
11. Work with the SNMP Card	38
11.1 Legacy Delta InsightPower SNMP Card.....	38
11.2 New Delta InsightPower SNMP IPv6 Card	40

1. Overview

The ShutdownAgent 2012 is a software that can protect the operating system which is supplied power by an UPS during input power fail. Through a Web Browser, you can easily obtain current UPS event, shutdown strategy and countdown to shutdown information.

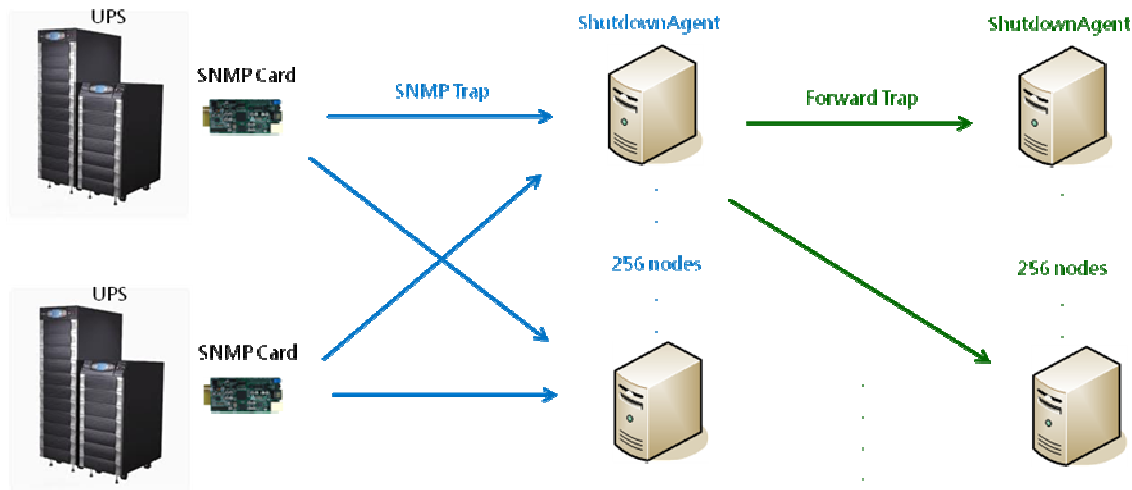

1.1 Features

1. Support SNMPv1, v3 trap.
2. Support SNMPv1, v3 server access for monitoring ShutdownAgent status and configure shutdown parameters.
3. Provide web interface through HTTP and HTTPS.
4. Provide the batch configuration to deploy settings at a finger click.
5. Forward SNMP trap to extend protecting up to 255 servers.
6. Support up to 32 input trap sources for redundant (logical OR) and parallel (logical AND) application.
7. Provide console configuration for basic system parameters setup.
8. Support Windows 32/64 bits setup programs.

1.2 OS Support

Windows XP-sp2, Vista, 7, 8, 10

Windows 2003, 2008, 2012

Windows 2008/2012 Server Core, Hyper-V 2008/2012 R2

Oracle Linux 7.1

Linux OpenSUSE 11.4

Linux ubuntu 10.04

Linux Fedora 3.1.9

CentOS 5.8, 6.5

VMWare ESXi 4.1, 5, 5.1, 5.5, 6 (with essential license after version 5)

Citrix XenServer 6.0.0

Linux KVM

IBM AIX 7.1


2. Installation/ Uninstallation

2.1 For Windows System


There are 2 of setup programs: ShutdownAgent-2012-Setup(win32).exe and ShutdownAgent-2012-Setup(x64).exe. One is for 32 bit Windows operating system and the other one is designed for 64 bit Windows environment.

2.1.1 Installation Process

1. Execute the ShutdownAgent-2012-Setup(xxx).exe to run the setup program.
2. The welcome page will first display, press the "Next" button to continue the installation or press the "Cancel" to stop the installation.

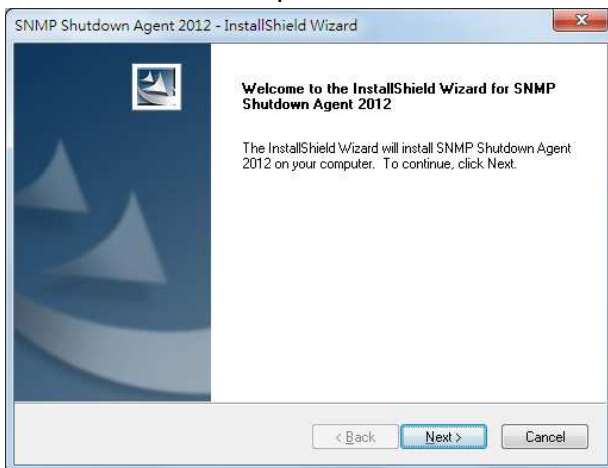


3. Then continue to show the license agreement page. Press "Yes" button to continue the installation and "No" to stop the installation.

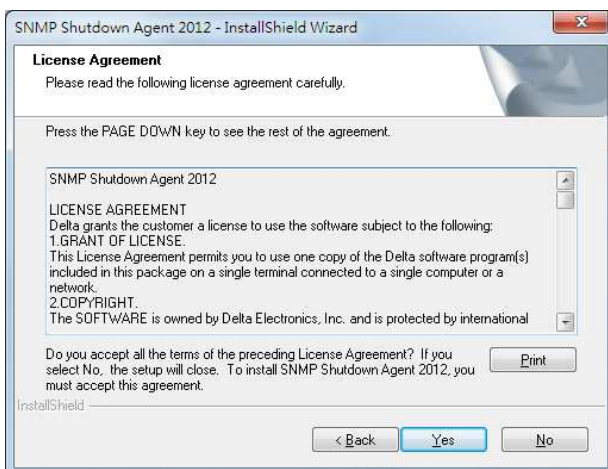


4. At this stage you can change the destination location by pressing the "Browse" button or just press the "Next" to install the software in the default path.




5. Now the setup program is ready for your confirmation to start copying the related program files. Press the "Install" button to start copying the software to the destination location in your hard drive.

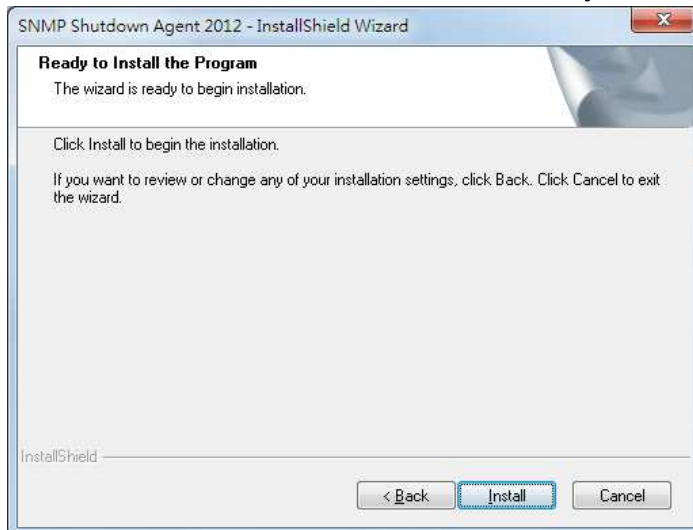


6. Now the setup program is copying the files and shows the progress.

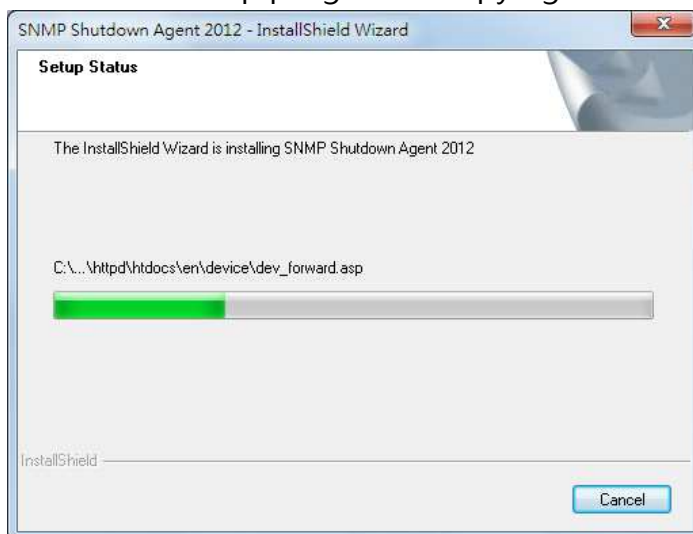

7. After complete the installation, press the “Finish” button to exit the installation process.

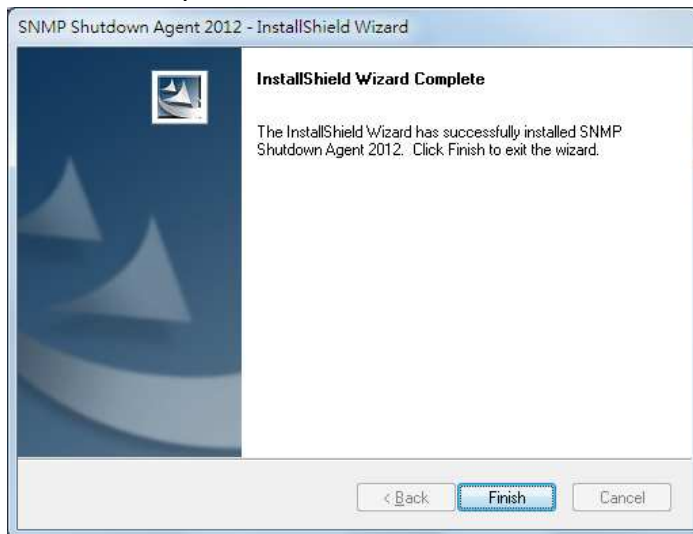

8. After finishing the installation, the ShutdownAgent will start the service program automatically and add an icon to indicate its status to the desktop tool bar. Meanwhile, a dialog box pops up to ask for launching the Agent-Config application to do the basic configuration. If you are not operate a Windows server core operating system then you can ignore this ask. Just press “No” to finish the installation. Press “Yes” to launch the Agent-Config in the shell mode. Please refer to the chapter 3 for the detail of Agent-Cofnfig.

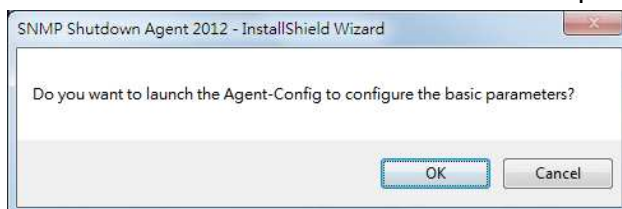

The **ShutdownAgent** software is comprised of two modules:

A **Service** module (**Shutdown-Agent Service: Agent-Service.exe**), which runs in the background as a Service and listen for the SNMP trap from the source IP addresses.

A **Status** module (**Agent-Status.exe**), which enables you to control and configure the software through drop down menus and dialog boxes. It also allows you to launch the web browser and login automatically to monitor, configure and control the software.

After finishing the installation, the setup program will create a **SNMP ShutdownAgent** association with the following shortcuts:

Console Configure: To launch the Agent-Config.exe for you to quickly configure the basic communication parameters.


Uninstall: To remove the **SNMP ShutdownAgent 2012** from your hard disk, the configuration data will still be kept in the installed directory.

User Manual: The user manual in pdf format.


Web Monitor: The major user interface of **ShutdownAgent**, used to monitor and configure the software.

2.1.2 Uninstallation Process

1. Select the Uninstall from the **SNMP ShutdownAgent** program folder to start the un-installation process. Or you can start the **SNMP ShutdownAgent** uninstallation process from the Add/Remove Program of the Control Panel.
2. Press the "OK" button to confirm removing all of the application from the hard drive or "Cancel" to cancel the un-installation process.

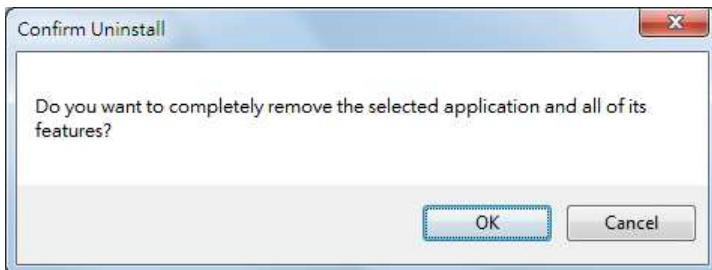

3. Press the "Finish" button to complete the un-installation process.

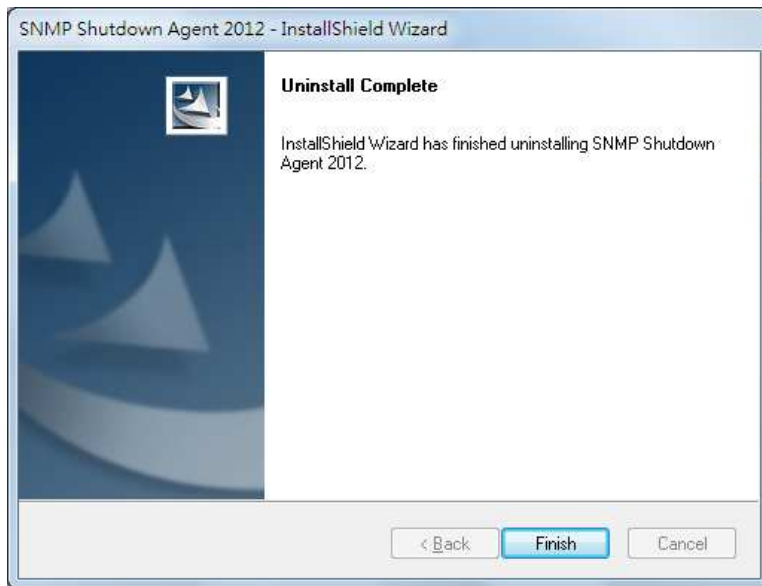

2.2 For Linux System

2.2.1 Installation Process

1. Please login to the Linux system and change to the root account:

```
su root
```

2. Copy the sa2012-linux.tar.gz to the /tmp directory:

```
cp sa2012-linux.tar.gz /tmp
```

3. Change your working directory to /tmp:

```
cd /tmp
```

4. uncompress the sa2012-linux.tar.gz:

```
gunzip sa2012-linux.tar.gz
```

5. extract the sa2012-linux.tar:

```
tar xvf sa2012-linux.tar
```

6. Run the install script:

```
./install
```

```
+-----+
| SNMP ShutdownAgent 2012 0.0.1 for Linux |
| Copyright (c) 2011 Delta Electronics, Inc. |
| All Rights Reserved. |
+-----+

Do you want to install the ShutdownAgent? [y|n]
```

7. Press 'y' to proceed the installation process:

```

+-----+
| SNMP ShutdownAgent 2012 0.0.1 for Linux |
| Copyright (c) 2011 Delta Electronics, Inc. |
| All Rights Reserved. |
+-----+

The destination directory is /usr/local/upsagent.

Copying files .....
Install service link.

shutdownagent          0:off  1:off  2:off  3:on   4:off  5:on   6:off

Starting ShutdownAgent(upsagentd) ... done

Do you want to configure the ShutdownAgent right now? [y|n]

```

8. Now the ShutdownAgent has been installed in the following directory /usr/local/upsagent/ and the service program starts up automatically.

Press 'y' to launch the /usr/local/upsagent/configure program to configure the basic networking parameters for ShutdownAgent or press 'n' to finish the install process.

Please see chapter 3 for more information if you want to configure the basic networking parameters.

2.2.2 Uninstallation Process

1. Please login to the Linux system and change to the root account:

```
su root
```

2. Change your working directory to /usr/local/upsagent:

```
cd /usr/local/upsagent
```

3. Run the uninstall script to remove ShutdownAgent:

```
./uninstall
```

4. Press 'y' to start the uninstallation process.

2.3 For IBM AIX System


Both of the installation and uninstallation are the same with Linux system, please refer to the section 2.2.

3. Console Configuration

The configuration program is design to do the basic configuration for the ShutdownAgent in the shell mode. The software can be launched at the end of the installation process or you can go to the installed directory to launch it manually.

For Windows it locates in "C:\Program Files\SNMP Shutdown Agent 2012\Agent-Config.exe"

For Linux it is installed in "/usr/local/upsagent/configure"

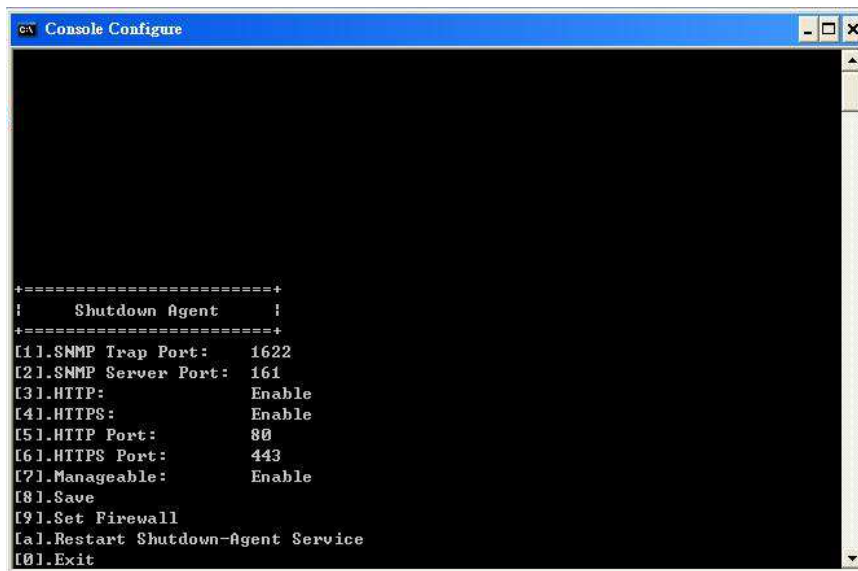

3.1 Console Menu

No.	Function	Description	Default
1.	SNMP Trap Port	The UDP port to listen for the SNMP trap	162
2.	SNMP Server Port	The UDP port for replying get/set commands	161
3.	HTTP	Enable or disable the HTTP protocol	Enable
4.	HTTPS	Enable or disable the HTTPS protocol	Enable
5.	HTTP Port	The TCP port for HTTP	80
6.	HTTPS Port	The TCP port for HTTPS	443
7.	Manageable	Allow the management software to manage ShutdownAgent	Enable
8.	Save	Save the configured parameters to agent.ini	
9.	Set Firewall	Insert or remove the firewall rule for the	


		ShutdownAgent. This option is provided for quickly testing the network communication. The firewall settings may be recovered after the OS reboots.	
a.	Restart Shutdown-Agent Service	Restart service program to apply the changes	
0.	Exit	Exit the configuration program	

4. Operation in Windows

After installation, the ShutdownAgent places an icon in the desktop toolbar to indicate the status of monitoring UPS.

Icon	Description
	Normal
	Service stop
	UPS on battery mode
	UPS battery low
	UPS on bypass mode

To show the pop up menu, please move the mouse cursor over the ShutdownAgent icon and click the mouse button to pop up the menu:

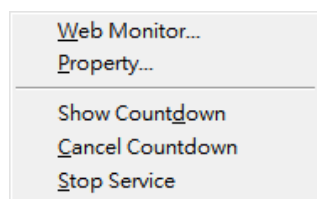

4.1 Web Monitor


ShutdownAgent implemented a web engine to provide the web interface to interact with the end customers. You can monitor and configure the software through the web interface.

Select the **Web Monitor** menu item from the menu to launch the default web browser, if your login account in the Windows system belongs to the local Administrators group then ShutdownAgent will login to its web engine automatically as the administrator privilege. If you connect a web browser from a remote PC then you have to key in the account and password by yourselves. For more detail information about the web operation, please refer to the chapter 5.

4.2 Property

Select the **Property** menu item will pop-up the Property dialog box which provides another quick way to configure the basic parameters of ShutdownAgent.

From the General page you can observe the software version number, IP addresses and host name.

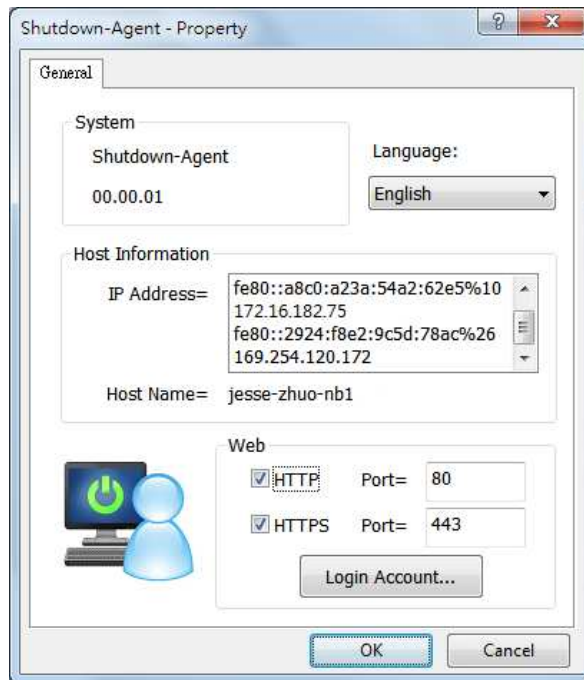

Language:

Select the supported language from this option.

HTTP:

To enable/ disable the HTTP protocol, assign a different number of the Port number to change the HTTP connection through the other network port. The default value is 80.

If you have changed the HTTP port number from 80 then you have to key in the connection URL as the following:

`http://192.168.1.100:8001`

where 192.168.1.100 is the ip address of the PC which ShutdownAgent installed and the 8001 is the port number which you assigned.

NOTE: Please check the Windows firewall setting if the HTTP connection is refused.

HTTPS:

To enable/ disable support the HTTPS protocol, assign a different number of the Port number to change the HTTPS connection through the other network port. The default value is 443.

If you have changed the HTTPS port number from 443 then you have to key in the connection URL as the following:

`https://192.168.1.100:4430`

where 192.168.1.100 is the ip address of the PC which ShutdownAgent installed and the 4430 is the port number which you assigned.

NOTE: Please check the Windows firewall setting if the HTTPS connection is refused.

Login Account:

The ShutdownAgent implements 3 levels of authentication for the web login as the following:

Administrator:

Has sole right to modify the ShutdownAgent system settings.

Device Manager:


Is not permitted to change the system settings but has the ability to configure the device settings.

Read Only User:

Can observe the connected devices only.

The following is the default account and password list, please note that they are case-sensitive.

	Account	Password
Administrator	admin	password
Device Manager	device	password
Read Only User	user	password

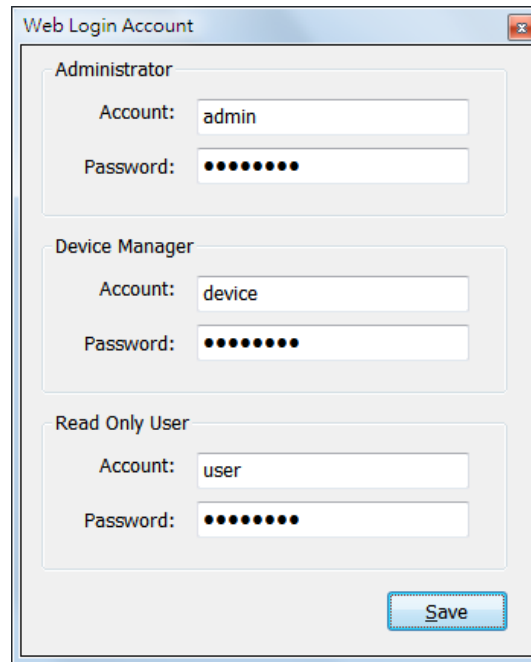A screenshot of a 'Web Login Account' dialog box. It contains three sections: 'Administrator' with fields for 'Account' (admin) and 'Password' (masked with dots); 'Device Manager' with fields for 'Account' (device) and 'Password' (masked with dots); and 'Read Only User' with fields for 'Account' (user) and 'Password' (masked with dots). A 'Save' button is located at the bottom right.

4.3 Show Countdown

Select the Show Countdown menu item to display the countdown windows when the ShutdownAgent start to counting down the OS shutdown delay.



4.4 Cancel Countdown

Select the Cancel Countdown menu item during the counting down to stop the shutdown process. To resume the shutdown process, please de-select the Cancel Countdown menu item to counting down the OS shutdown delay.

In addition to de-select the Cancel Countdown menu item to continue the countdown process, when the shutdown event changes the software will start a new countdown process.

4.5 Stop Service

Select the Stop Service menu item to stop the ShutdownAgent service module. To start the service again please de-select the Stop Service menu item.

5. Web Interface

5.1 Run a Web Browser


To connect a web browser from the same PC which ShutdownAgent installed, please select the **Web Monitor** from the toolbar menu, ShutdownAgent will open your default web browser and if your Windows account belongs to the local Administrators group then the ShutdownAgent will login as an administrator for you automatically.

ShutdownAgent allows at most 16 users login at the same time.

You can also connect a web browser from a remote PC, please follow the steps: Make sure that you have a **TCP/IP** network installed.

Start your Web Browser. Enter **http: //host_name** or **http: //ip_address** in the address bar for the plain text web transmission or **https: //host_name** or **https: //ip_address** for the encrypted web transmission. If you have changed the port number of HTTP or HTTPS then please enter **http: //host_name:port_number** or **http: //ip_address:port_number** in the address bar for the plain text web transmission or **https: //host_name:port_number** or **https: //ip_address:port_number** for the encrypted web transmission

The ShutdownAgent will then ask your account and password. After keying in the correct **account** and **password**, the **ShutdownAgent Home Page** will appear on the screen.

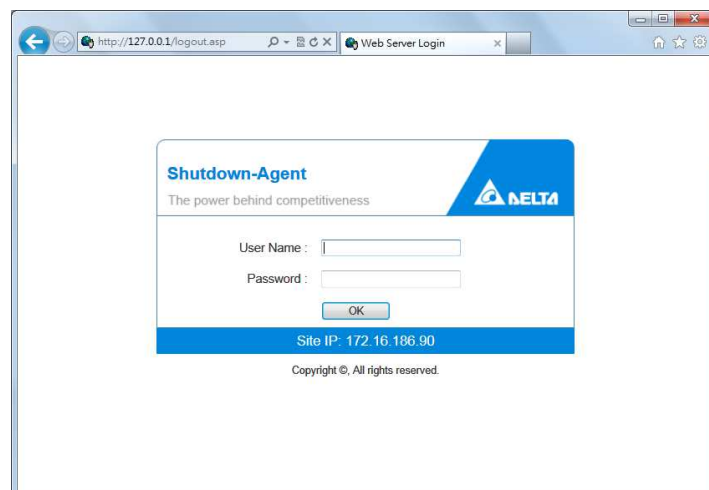

Note: The ShutdownAgent will logout the user automatically if there is no any data transmission through HTTP/HTTPS for more than 30 minutes.

5.2 Monitor >> Information >> Summary

This web page includes the information of identification, shutdown status, source IP status and the last 5 event logs.

Host

Host Name: jesse-zhuo-nb1 SNMP Trap Port: 162
 OS Version: Microsoft Windows 7 Enterprise Edition Service Pack 1 (build 7601), 64-bit

Shutdown

Shutdown Type: Hibernate
 OS Countdown: --:--

SNMP Trap Source IP List

Purpose: For Redundant (Logical OR)

	Source IP	UPS Health	Current Event
1	10.0.10.21	Normal	
2	172.16.186.162	Normal	

Last 5 Event Log

	Source IP	Date/Time	Event Level	Event Description
1	Local	11/24/2011 19:56:52	Information	Stop countdown shutdown
2	10.0.10.21	11/24/2011 19:56:52	Information	Power restore
3	Local	11/24/2011 19:56:45	Warning	Countdown to shutdown OS in 04:59 second(s)
4	10.0.10.21	11/24/2011 19:56:45	Warning	Power fail
5	0.0.0.0	11/24/2011 19:55:23	System	Account admin login from 127.0.0.1:50436

Copyright © 2011 Delta Electronics, Inc. All Rights Reserved.

Host:

Include the host name, the listen UDP port for SNMP trap and the description of operating system.

Shutdown:

Display the shutdown type (Shutdown, Power Off, Hibernate) and the countdown time to shutdown the OS in second.

SNMP Trap Source IP List:

ShutdownAgent is capable of receiving SNMP traps from multiple source hosts then decide to determine the event by logical OR for redundant application and logical AND for parallel application.

Last 5 Event Log:

Show the last 5 event logs, if you want to see more please visit the Event Log page.

5.3 Monitor >> Information >> Event Log

This web page lists all the events that have detected by the software. The existing logs are overwritten when the maximum number of entries (rows) has been reached. And the maximum number of event is 10,000. You can also download the software event log to a .csv format file.

Log Page Buttons:


Press the "<<" button to go to the newest page and the ">>" button to go to the oldest page. Click on the page number buttons to observe the event log by page.

Range of Date:

You can also filter the event log by assigning a period of date. Fill in the From and To text boxes then press the Apply button to request the event log by your assigned period of date.

Download All:

Press the **Download All** button to export all of the event log to a .csv format of file.

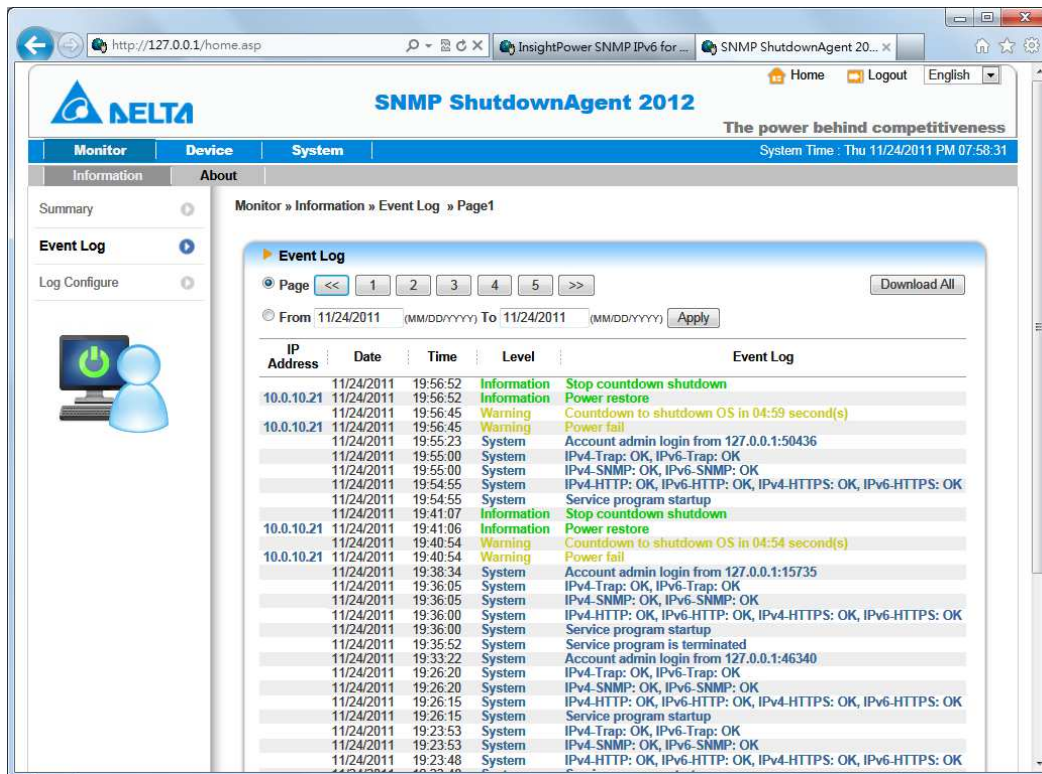


5.4 Monitor >> Information >> Log Configure

This page lets the Device Manager clear event log.

Clear Event Log:

To clear all of the data log by clicking this button.

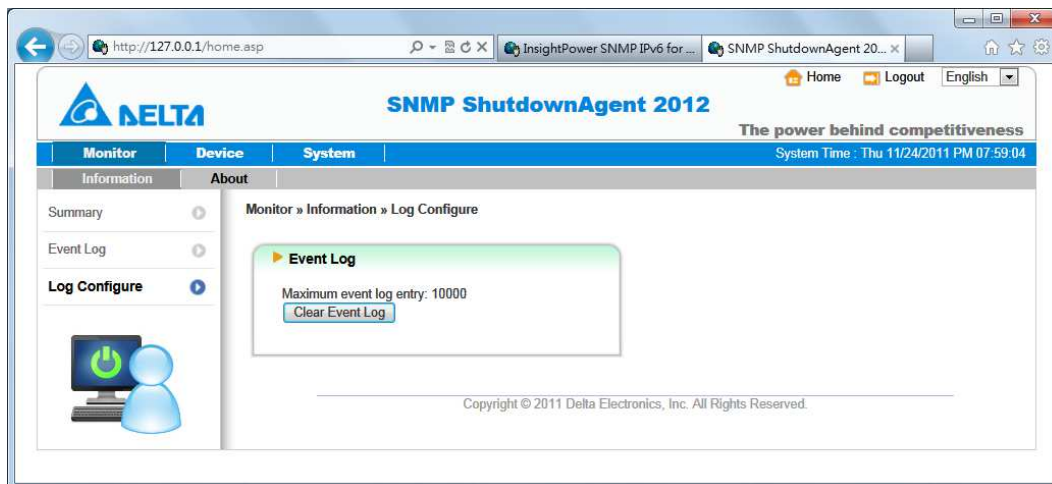

5.5 Device >> Host >> Configure

This page is used to configure the major functions, they are: Shutdown, Reaction and Source IP.

Shutdown:

Select the **Shutdown Type** to determine the way to shutdown the operating system. There are **Shutdown**, **Power Off** and **Hibernate** types and the default value is Shutdown.

Now we should continue to determine the shutdown delay time for the following 5 power events: Power Fail, Battery Low, Overload, On Bypass and Smart Shutdown. If the power events recover during countdown then the operating system will not be shutdown.

The screenshot shows the ShutdownAgent 2012 web interface. The browser address bar shows 'http://127.0.0.1/home.asp'. The page title is 'ShutdownAgent 2012' with the tagline 'The power behind competitiveness'. The system time is 'Mon 02/25/2013 AM 11:33:00'. The navigation menu includes 'Monitor', 'Device', and 'System'. The 'Device' tab is selected, and the 'Host' sub-tab is active. The 'Configure' section is expanded, showing a sidebar with 'Configure', 'Control', and 'Forward Trap'. The main content area is titled 'Device » Host » Configure' and contains three sections: 'Shutdown', 'Reaction', and 'Manageable'. The 'Shutdown' section has a 'Shutdown Type' dropdown set to 'Shutdown'. Below it is a table with 5 rows for power events, each with an 'Enable' checkbox, an 'Event' name, and an 'OS Shutdown Delay (in seconds)' field. The 'Reaction' section has a 'Notify Message' checkbox checked with a 'Period' of 60 seconds, and an 'Execute Command File' checkbox unchecked with a 'File' input field and a 'Run Before Shutdown' of 120 seconds. The 'Manageable' section has an 'Allow the ShutdownAgent to be managed by an authenticated manager' checkbox checked. The 'Source IP' section is also visible, showing 'Receive Trap Port: 162', 'Purpose' radio buttons for 'For Redundant (Logical OR)' and 'For Parallel (Logical AND)', and a table for 'Source IP' with columns 'IP Address', 'Community', and 'SNMPv3 User'.

	Enable	Event	OS Shutdown Delay (in seconds)
1	☒	Power Fail	300 second(s)
2	☒	Battery Low	30 second(s)
3	☒	Overload	60 second(s)
4	☐	On Bypass	300 second(s)
5	☒	Smart Shutdown	30 second(s)

	IP Address	Community	SNMPv3 User
1	0.0.0.0	public	

Reaction:

Enable the **Notify Message** to pop up a message box once ShutdownAgent receives the SNMP traps from the source IP addresses. Assign the period value to report the message periodically, set a 0 to the Period will show the message only once.

Enable the **Execute Command File** to run an assigned external file before shutdown. Set a value to the **Run Before Shutdown** to inform ShutdownAgent when to launch the assigned executable file.

Source IP:

Assign the **Receive Trap Port** to open the specific UDP port for receiving SNMP trap. Then select the Redundant(Logical OR) or Parallel(Logical AND) for the application purpose.

Redundant(Logical OR): Summarize the received power event by logical OR for all of the source IP addresses to determine whether the power event occurs or not. So if the power event occurs in one of the source IP addresses then the power event is tenable and the ShutdownAgent starts to countdown accordingly. Only when the power event recovers from all of the source IP addresses the ShutdownAgent stops countdown and cancel the shutdown process.

Parallel(Logical AND): Summarize the received power event by logical AND for all of the source IP addresses to determine whether the power event occurs or not. So if the power event occurs in all of the source IP addresses then the power event is tenable and the ShutdownAgent starts to countdown accordingly. Once the power event recovers from one of the source IP addresses the ShutdownAgent stops countdown and cancel the shutdown process.


Source IP Address: Assign the source IP address, ShutdownAgent will parse the SNMP trap only when the packet is received from the assigned IP addresses.

Community: If the value is not empty then only the received trap with the same community string will be accepted. If the value is empty then ShutdownAgent will accept any of the received community string.

SNMPv3 User: This field is used for SNMPv3 packet. If the value is not empty then only the received trap with the same user defined in the SNMPv3 USM table will be accepted. If the value is empty then ShutdownAgent will accept the users which assigned in the SNMPv3 USM table.

Manageable:


Select the **Allow the ShutdownAgent to be managed by an authenticated manager** option to let the ShutdownAgent reply the query from any authenticated manager. The authenticated manager can be a SNMP card or a centralized management software. After collecting the ShutdownAgent information, the authenticated manager can provide a comprehensive list of all of the ShutdownAgent.

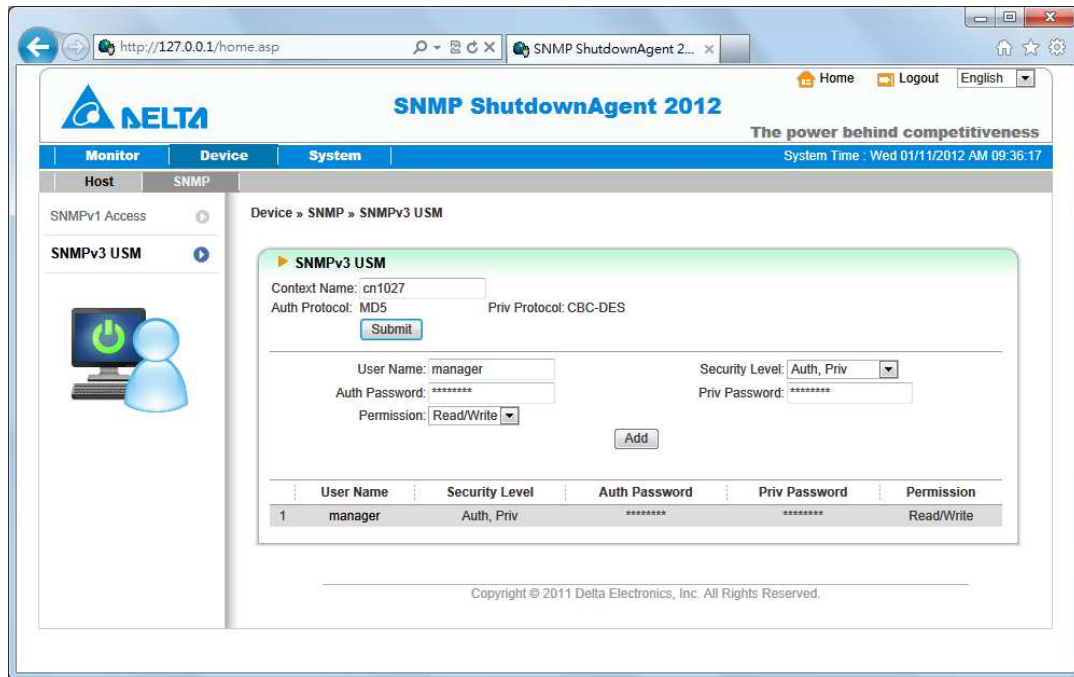

In fact, the authenticated manager communicate with the ShutdownAgent through SNMPv3 with the first default account in the SNMPv3 USM list. If the **Allow the ShutdownAgent to be managed by an authenticated manager** option is enabled then the permission of "manager" account changes to "Read/Write" , otherwise the permission is "Disable" .

The default setting of **Allow the ShutdownAgent to be managed by an authenticated manager** option is "enabled" .

5.6 Device >> Host >> Control

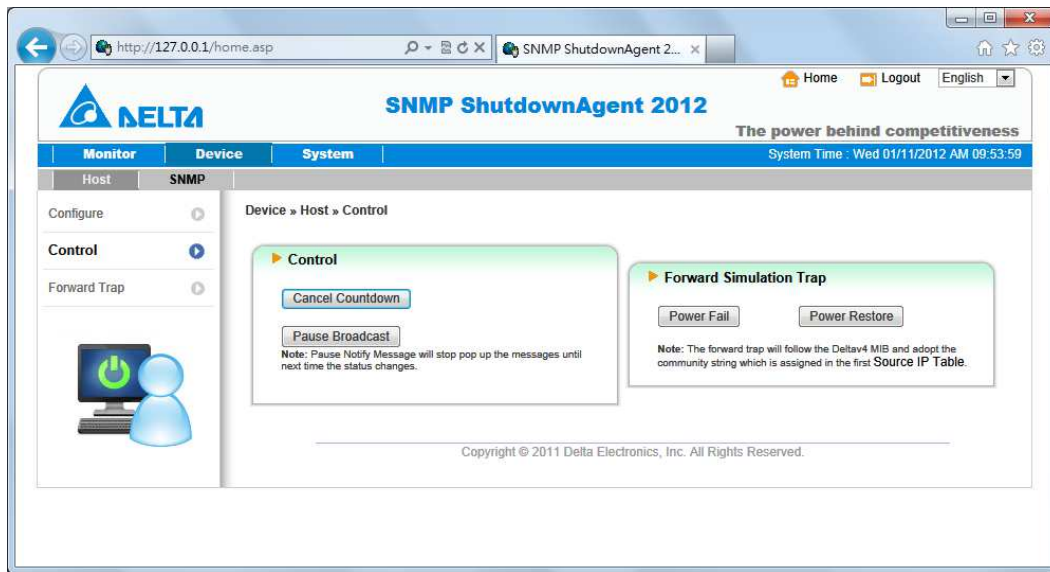

Control:

Press the Cancel Countdown button during the countdown shutdown process to stop counting down. Press the button again to resume the shutdown process.

Forward Simulation Trap:

Press the Power Fail button to send the simulated power fail SNMP trap to the assigned forward target IP addresses.

Press the Power Restore button to send the simulated power restore SNMP trap to the assigned forward target IP addresses.

5.7 Device >> Host >> Forward Trap

Forward Trap is used to forward the received SNMP trap to extend the size of protection OS shutdown gracefully.



5.8 Device >> SNMP >> SNMP Access

The shutdownAgent supports SNMP protocol and SNMP NMS (Network Management System), which are commonly used to monitor network devices for conditions that call for administrative attention. To prevent unauthorized access, you can specify the NMS IP addresses that are allowed to access, their community strings and access levels. The maximum number of IP entries is 255.




5.9 Device >> SNMP >> SNMPv3 USM

SNMPv3 offers features such as the encryption of packets and authentication to improve security. The SNMPv3 USM (User Session Management) allows you to

assign 32 User Names whose access is granted via SNMPv3 protocol. You can also define their respective Security Levels, Auth Passwords, Priv Passwords and Permission.

The first one account cannot be deleted, to disable it please go to the Device > > Host > > Configure web page then uncheck the manageable option.

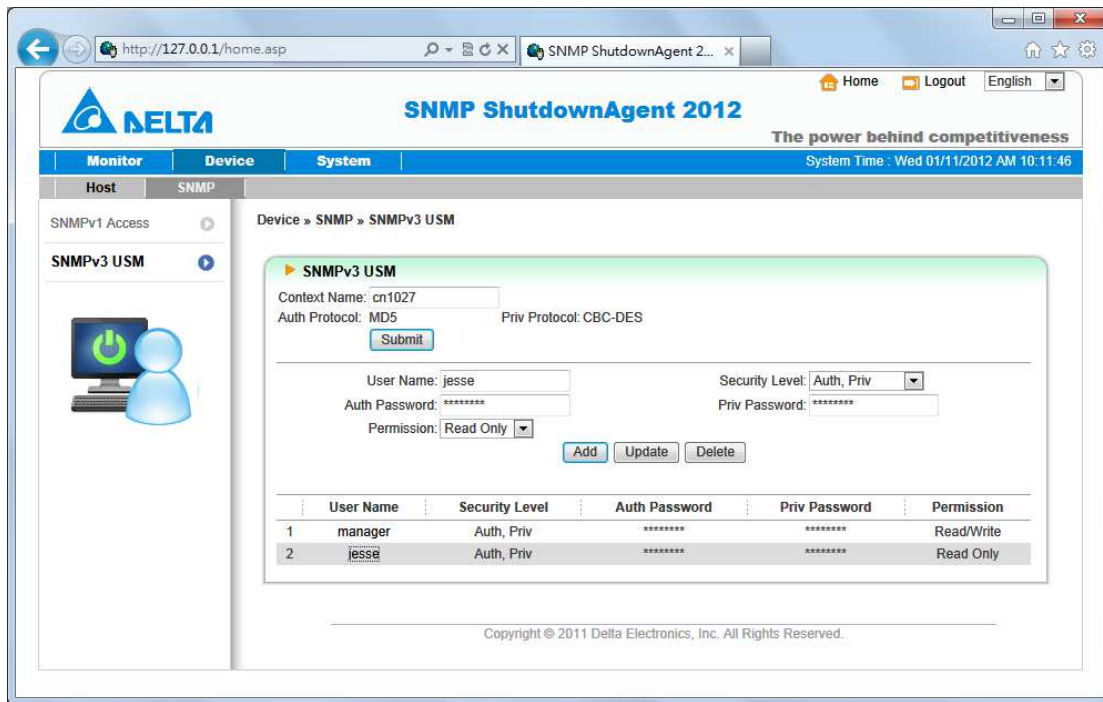

5.10 System > > Administration > > Information

Here to assign the system information for the ShutdownAgent, including Installation Date, Location and Description.

The screenshot shows the web interface of the SNMP ShutdownAgent 2012. The browser address bar displays 'http://127.0.0.1/home.asp'. The page header includes the Delta logo, the title 'SNMP ShutdownAgent 2012', and the tagline 'The power behind competitiveness'. The system time is 'Wed 12/07/2011 AM 11:23:11'. The navigation menu has 'Monitor', 'Device', and 'System' tabs, with 'Administration' selected under 'System'. The left sidebar shows 'Information', 'Login User', 'Web', and 'Batch Configuration' options. The main content area is titled 'System » Administration » Information' and contains a form with the following fields: System Name (ShutdownAgent), System Contactor (Jesse), System Location (RUBU Software), Installation Date (12/06/2011), and Description (ShutdownAgent @ jesse-win7). A 'Submit' button is at the bottom of the form. The footer states 'Copyright © 2011 Delta Electronics, Inc. All Rights Reserved.'

5.11 System >> Administration >> Login User

You can manage the login authentication for web interface by assigning 3 different level of users' account and password.

The access permission for the account types are listed as follows:

Administrator: Permitted to modify all settings.

Device Manager: Permitted to modify device-related settings.

Read Only User: Only permitted to observe ShutdownAgent status.

The screenshot shows the 'Login User' page in the SNMP ShutdownAgent 2012 web interface. The browser address bar displays 'http://127.0.0.1/home.asp'. The page header includes the Delta logo, the title 'SNMP ShutdownAgent 2012', and the tagline 'The power behind competitiveness'. The system time is 'Wed 12/07/2011 AM 11:23:52'. The navigation menu has 'Monitor', 'Device', and 'System' tabs, with 'Administration' selected under 'System'. The left sidebar shows 'Information', 'Login User', 'Web', and 'Batch Configuration' options. The main content area is titled 'System » Administration » Login User' and contains a 'User Manager' table with the following data:

	Privilege	Account Name (16 chars max.)	Password (16 chars max.)
1	Administrator	admin	*****
2	Device Manager	device	*****
3	Read Only User	user	*****

A 'Submit' button is located below the table. The footer states 'Copyright © 2011 Delta Electronics, Inc. All Rights Reserved.'

5.12 System >> Administration >> Web

This menu lets the administrator enable or disable the HTTP/HTTPS communication protocols available in the ShutdownAgent.



HTTP:

Enabling or disabling the HTTP connection with the ShutdownAgent.

HTTPS:

Enabling or disabling the HTTPS connection with the ShutdownAgent.

HTTP Port:

The user may configure HTTP protocol to use a port number other than standard HTTP port (80).

HTTPS Port:

The user may configure HTTPS protocol to use a port number other than standard HTTPS port (443).

Web Refresh Period:

The period of time to update the monitoring web pages. The range is 1~9999 seconds.

SSL Certificate:

To ensure connection security between the ShutdownAgent and the connecting workstation, SSL certificate can be used to encrypt and secure

the integrity of transmitting data.

Certificate File: This allows you to replace your own SSL certificate file. The ShutdownAgent supports PEM format which is generated by OpenSSL.

Click **Choose File** to upload a certificate file.

5.12 System >> Administration >> Batch Configuration


The ShutdownAgent provides batch configuration to allow quick and effortless setup on multiple ShutdownAgent hosts. You can duplicate settings by downloading the configuration file from the ShutdownAgent that you have successfully configured, and upload the configuration files on other hosts.

Download:

Download the agent.ini for you to store or edit the configuration file.

Upload:

Upload the configuration file to ShutdownAgent to apply the change immediately.

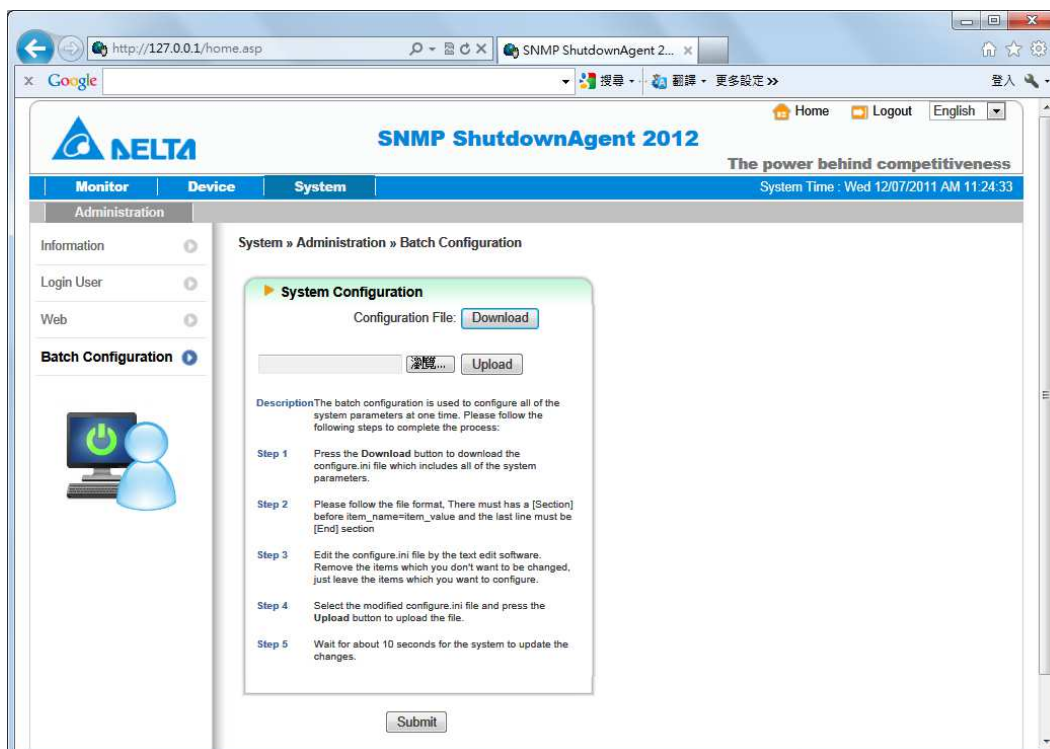

6. 2008 Server Core Setup for ShutdownAgent

While installation the ShutdownAgent in the 2008 server core, it requires the following commands to transfer the file and add some rules for firewall.

1. Disable firewall:

```
netsh advfirewall set allprofiles state off
```

2. Enable firewall:

```
netsh advfirewall set allprofiles state on
```

3. Add a remotely shared directory:

```
net use e: \\<ip address>\e
```

4. Open the SNMP Trap UDP 162

```
netsh advfirewall firewall add rule name="SNMPTrap" protocol=UDP dir=in localport=162  
action = allow
```

5. Open SNMP Server UDP 161

```
netsh advfirewall firewall add rule name="SNMPServer" protocol=UDP dir=in  
localport=161 action = allow
```

6. Open the HTTP TCP 80

```
netsh advfirewall firewall add rule name="HTTP" protocol=TCP dir=in localport=80 action  
= allow
```

7. Open HTTPS TCP 443


```
netsh advfirewall firewall add rule name="HTTPS" protocol=TCP dir=in localport=443  
action = allow
```

Firstly, put the Shutdown-Agent-2012-Setup(x64).exe setup file in the 2008 server directory. If there is no CD-ROM you can set the "Disable firewall" command, "Add a remotely shared directory" command then copy the file from your PC to the 2008 server. Don't forget to set the "Enable firewall" command when complete.

Secondly, follow the chapter 2 to install the ShutdownAgent in the 2008 server.

The last step is use the open HTTP/HTTPS, SNMP Trap/Server port commands to open the necessary which you want.


You can easily run the Agent-Config.exe to configure the basic networking parameters for the web and SNMP network protocols after installation.

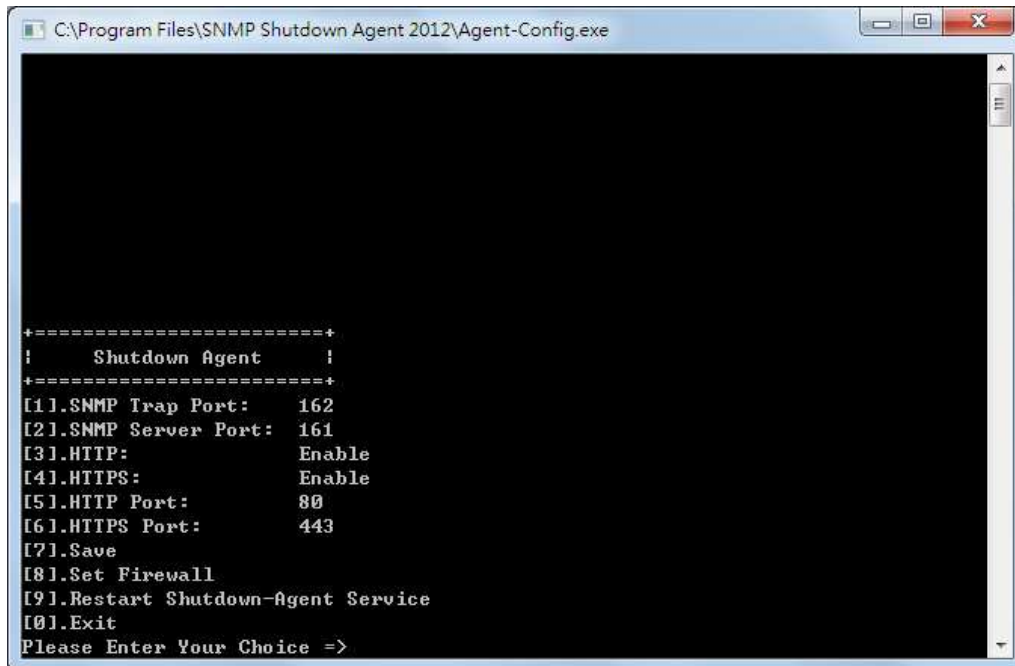

```
C:\Program Files\SNMP Shutdown Agent 2012\Agent-Config.exe

+=====+
!   Shutdown Agent   !
+=====+
[1].SNMP Trap Port:   162
[2].SNMP Server Port: 161
[3].HTTP:             Enable
[4].HTTPS:            Enable
[5].HTTP Port:        80
[6].HTTPS Port:       443
[7].Save
[8].Set Firewall
[9].Restart Shutdown-Agent Service
[0].Exit
Please Enter Your Choice =>
```

Select [8] to help you to insert or remove a firewall rule for the ShutdownAgent.

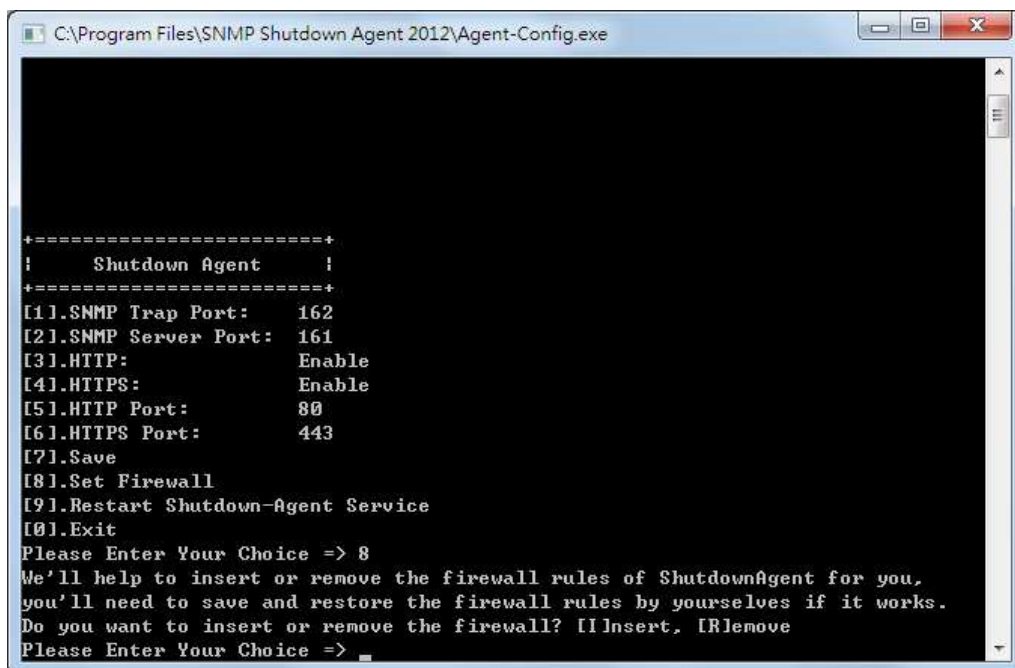

```
C:\Program Files\SNMP Shutdown Agent 2012\Agent-Config.exe

+=====+
!   Shutdown Agent   !
+=====+
[1].SNMP Trap Port:   162
[2].SNMP Server Port: 161
[3].HTTP:             Enable
[4].HTTPS:            Enable
[5].HTTP Port:        80
[6].HTTPS Port:       443
[7].Save
[8].Set Firewall
[9].Restart Shutdown-Agent Service
[0].Exit
Please Enter Your Choice => 8
We'll help to insert or remove the firewall rules of ShutdownAgent for you,
you'll need to save and restore the firewall rules by yourselves if it works.
Do you want to insert or remove the firewall? [I]Insert, [R]Remove
Please Enter Your Choice => _
```

7. VMWare ESXi4.0 Setup for ShutdownAgent

Before installing the ShutdownAgent in the ESXi4.0 server, please transmit the ShutdownAgent setup file to the ESX server through SFTP by FileZilla FTP Client or other SFTP client then login to the ESX server by the local console or through your favorite SSH client (such as Putty).


Please continue to follow the section 2.2 For Linux Installation/ Uninstallation.

To configure the basic networking parameters including the ESXi4.0 firewall, please see chapter 3 Console Configuration.

7.1 Configure the Firewall for ESXi 4.0

Run the `/usr/local/upsagent/configure`

Select [8] to help you to insert or remove a firewall rule for the ShutdownAgent.

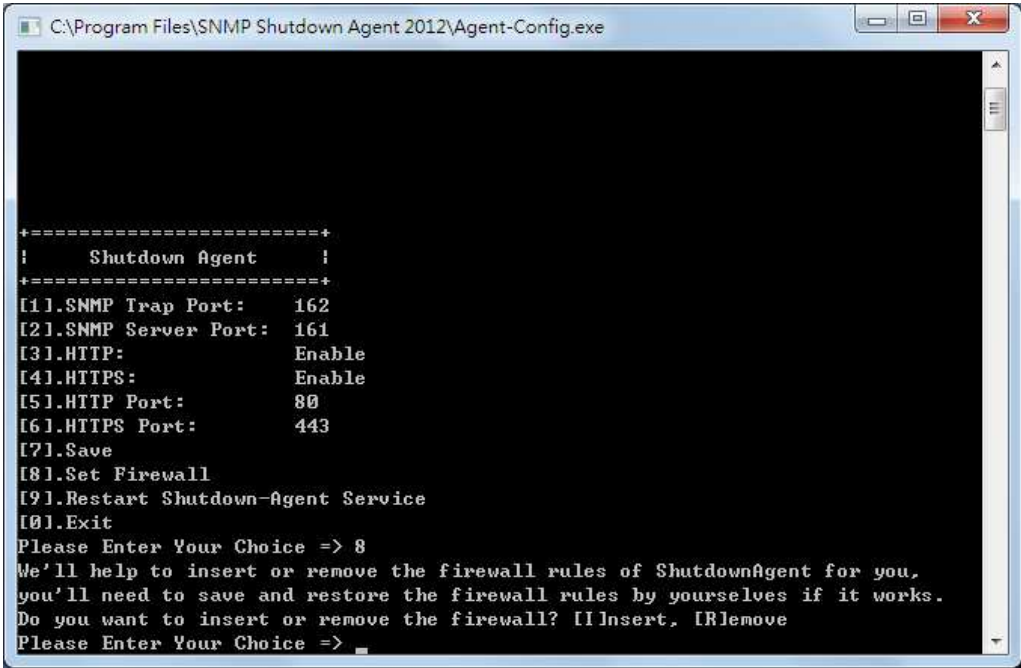

```

C:\Program Files\SNMP Shutdown Agent 2012\Agent-Config.exe

+=====+
!   Shutdown Agent   !
+=====+
[1].SNMP Trap Port:   162
[2].SNMP Server Port: 161
[3].HTTP:             Enable
[4].HTTPS:            Enable
[5].HTTP Port:        80
[6].HTTPS Port:       443
[7].Save
[8].Set Firewall
[9].Restart Shutdown-Agent Service
[10].Exit
Please Enter Your Choice => 8
We'll help to insert or remove the firewall rules of ShutdownAgent for you,
you'll need to save and restore the firewall rules by yourselves if it works.
Do you want to insert or remove the firewall? [I]Insert, [R]remove
Please Enter Your Choice =>
  
```

7.2 Install VMware Tools for Guest OS

To shutdown the guest OS from ESXi server, it's better for you to install the VMware tools for all of them so as to inform the guest OSes shutdown smoothly.

For Windows operating system.

Select the following menu Guest → Install/Upgrade VMware Tools

7.3 Configure ShutdownAgent for ESXi4.0

1. Login to the web interface of ShutdownAgent and the account level should be greater than or equal to device manager.
2. Goto the Device → Host → Configure web page to enable the **Enable Virtual Machine Shutdown** checkbox then select the **VMWare ESXi4** option.

The screenshot shows the ShutdownAgent 2012 web interface. The browser address bar shows <http://10.0.10.107/home.asp>. The page has tabs for Monitor, Device, and System. The 'Device' tab is active, and the 'Host' sub-tab is selected. The 'Configure' section on the left has a 'Host' icon. The main content area is titled 'Device » Host » Configure'.

Shutdown section:

Shutdown Type: Shutdown

	Enable	Event	OS Shutdown Delay (in seconds)
1	☒	Power Fail	300 second(s)
2	☒	Battery Low	30 second(s)
3	☒	Overload	60 second(s)
3	☐	On Bypass	300 second(s)
4	☒	Smart Shutdown	30 second(s)

Virtual Machine section (highlighted with a red box):

☒ Enable Virtual Machine Shutdown

VMWare ESXi 4

Additional configuration for ESXi4.1/ 5

VM Server IP Address:

Account:

Password:

Source IP section:

Receive Trap Port: 162

Purpose: ☒ For Redundant (Logical OR) ☐ For Parallel (Logical AND)

Source Trap IP: 0.0.0.0

Community: public

SNMPv3 User:

Manageable section:

☒ Allow the ShutdownAgent to be managed by an authenticated manager.


3. Press **Submit** button to update your changes.

8. VMWare ESXi4.1, ESXi5 Setup for ShutdownAgent

Before installing the ShutdownAgent for the ESXi4.1, ESXi5, you have to install the **vMA 5(vSphere Management Assistant 5)** and make sure the **VMWare tools** is installed in all of the guest OSes. Please then transmit the ShutdownAgent setup file to the vMA server through SFTP by FileZilla FTP Client or other SFTP client then login to the vMA server by the local console or through your favorite SSH client (such as Putty).

Please continue to follow the section 2.2 For Linux Installation/ Uninstallation.


To configure the basic networking parameters including the vMA firewall, please see chapter 3 Console Configuration.

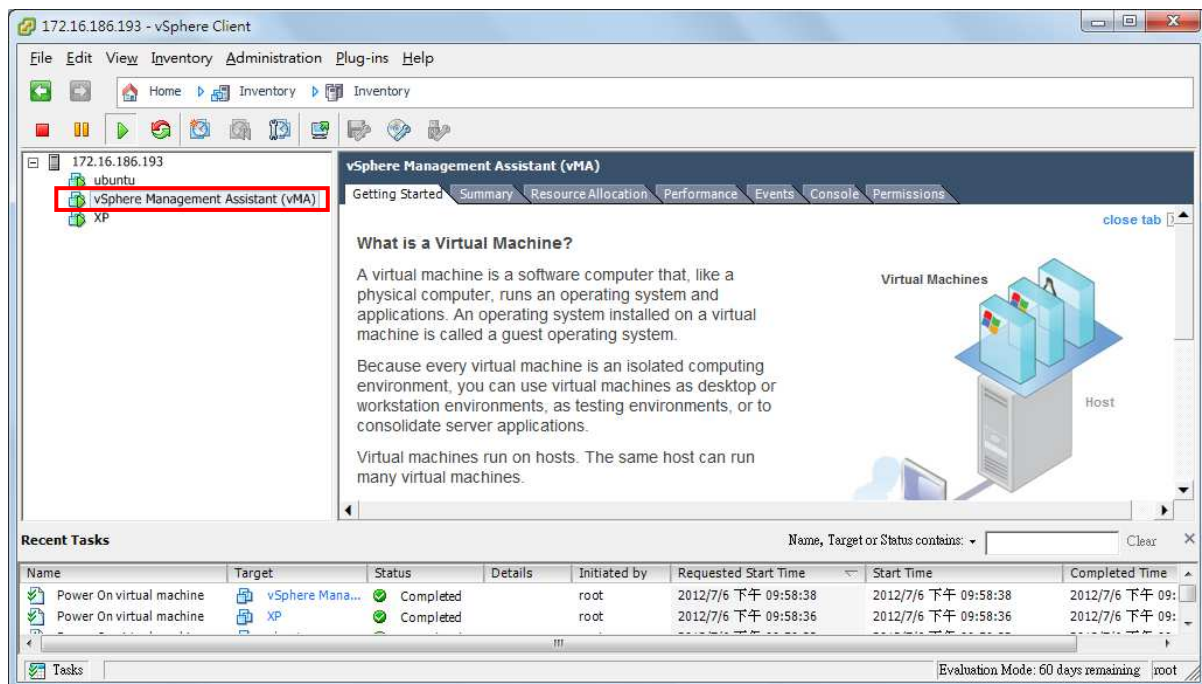

8.1 Configure the Firewall for vMA

Run the `/usr/local/upsagent/configure`

Select [8] to help you to insert or remove a firewall rule for the ShutdownAgent.

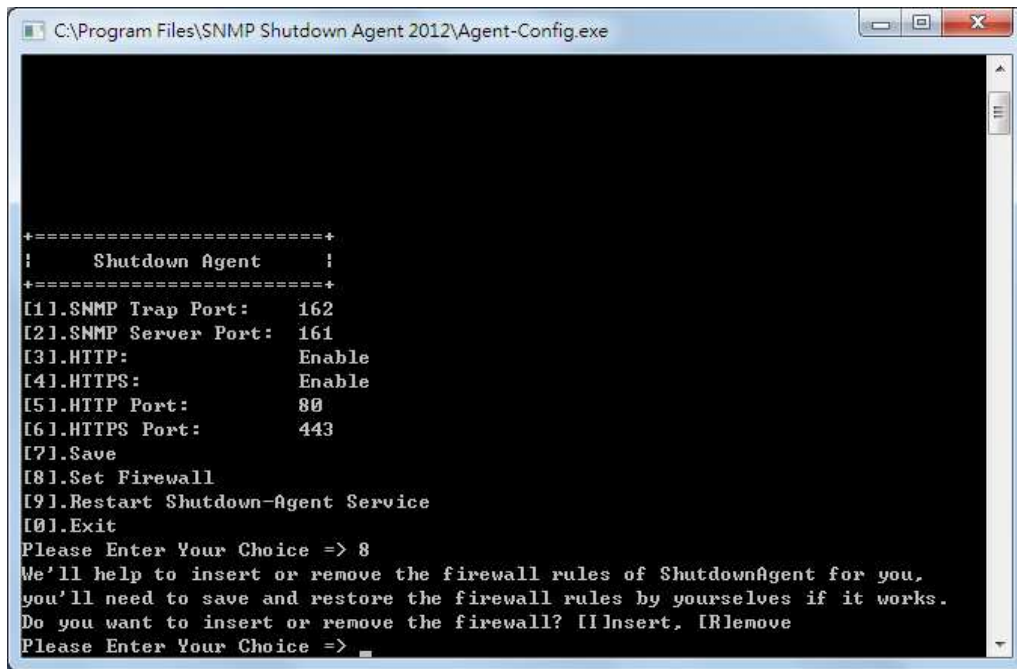

8.2 Install VMware Tools for Guest OS

To shutdown the guest OS from ESXi4.1, ESXi5 server, you have to install the VMware tools for all of them so as to inform the guest OSes shutdown smoothly.

For Windows operating system.

Select the following menu Guest → Install/Upgrade VMware Tools

8.3 Configure ShutdownAgent for ESXi4.1, ESXi5

1. Login to the web interface of ShutdownAgent and the account level should be greater than or equal to device manager.
2. Goto the Device → Host → Configure web page to enable the **Enable Virtual Machine Shutdown** checkbox then select the **VMWare ESXi4.1/ 5** option.
3. Please continue to setup the **Additional configuration for ESXi4.1/ 5**:
 VM Server IP Address: The ESXi server IP address. If there are more than 1 server IP addresses, please separate them by a space character.
 Account: The root privilege for ESXi server.
 Password: The password of the root account.

The screenshot shows the ShutdownAgent 2012 web interface. The browser address bar displays `http://10.0.10.107/home.asp`. The page has a navigation bar with tabs: Monitor, Device, System, and a sub-tab for Host > Configure. The left sidebar contains links for Configure, Control, and Forward Trap, along with a power button icon. The main content area is divided into several sections:

- Shutdown**: A table with columns for Enable, Event, and OS Shutdown Delay (in seconds). It lists five events: Power Fail (300s), Battery Low (30s), Overload (60s), On Bypass (300s), and Smart Shutdown (30s). A Submit button is at the bottom.
- Virtual Machine**: This section is highlighted with a red box. It includes:
 - ☒ Enable Virtual Machine Shtdown
 - VMWare ESXi 4.1/ 5 (dropdown)
 - Additional configuration for ESXi4.1/ 5
 - VM Server IP Address: 10.0.10.100
 - Account: root
 - Password: xxxxxxxx
 - Submit button
- Source IP**: Includes Receive Trap Port (162), Purpose (radio buttons for Logical OR and Logical AND), Source Trap IP (0.0.0.0), Community (public), and an Add button for SNMPv3 User.
- Manageable**: Includes ☒ Allow the ShutdownAgent to be managed by an authenticated manager and a Submit button.

A table at the bottom of the Source IP section shows the current configuration:

IP Address	Community	SNMPv3 User
1 0.0.0.0	public	

4. Press **Submit** button to update your changes.

9. XenServer Setup for ShutdownAgent

To install the ShutdownAgent in the Citrix XenServer, please see 2.2 For Linux in chapter 2 Installation/ Uninstallation.

To configure the basic networking parameters including the Xen firewall, please see chapter 3 Console Configuration.

9.1 Install PV driver for Guest OS

To shutdown the guest OS from XenServer, you need to install the PV driver for all of them so as to inform the guest OSes shutdown smoothly.

9.2 Configure ShutdownAgent for Xen

1. Login to the web interface of ShutdownAgent and the account level should be greater than or equal to device manager.
2. Go to the Device → Host → Configure web page to enable the **Enable Virtual Machine Shutdown** checkbox then select the **Xen Server** option.

The screenshot shows the ShutdownAgent 2012 web interface. The browser address bar shows <http://10.0.10.107/home.asp>. The page has a navigation bar with 'Monitor', 'Device', and 'System' tabs. The 'Device' tab is active, showing 'Host » Configure'. The left sidebar has 'Configure', 'Control', and 'Forward Trap' links. The main content area has several sections:

- Shutdown**: A section with a 'Shutdown Type' dropdown set to 'Shutdown'. Below it is a table with columns 'Enable', 'Event', and 'OS Shutdown Delay (in seconds)'.

Enable	Event	OS Shutdown Delay (in seconds)
☒	Power Fail	300 second(s)
☒	Battery Low	30 second(s)
☒	Overload	60 second(s)
☐	On Bypass	300 second(s)
☒	Smart Shutdown	30 second(s)

 A 'Submit' button is at the bottom of this section.
- Virtual Machine**: A section with a red box around the 'Enable Virtual Machine Shutdown' checkbox (which is checked) and the 'Xen Server' dropdown menu. Below this is the 'Additional configuration for ESXi4.1/ 5' section with fields for 'VM Server IP Address', 'Account', and 'Password', and a 'Submit' button.
- Source IP**: A section with 'Receive Trap Port' set to 162, 'Purpose' set to 'For Redundant (Logical OR)', 'Source Trap IP' set to 0.0.0.0, 'Community' set to public, and an 'SNMPv3 User' field with an 'Add' button. A 'Submit' button is at the bottom.
- Manageable**: A section with a checkbox 'Allow the ShutdownAgent to be managed by an authenticated manager' which is checked, and a 'Submit' button. A note below states: 'Note: The authenticated manager can be a SNMP card or a centralized management software. Enable this option to integrate the ShutdownAgent in the power management environment.'

3. Press **Submit** button to update your changes.

10. Linux KVM Setup for ShutdownAgent

To install the ShutdownAgent in the Linux server, please see 2.2 For Linux in chapter 2 Installation/ Uninstallation.

To configure the basic networking parameters including the firewall, please see chapter 3 Console Configuration.

10.1 Install libvirt Tools for KVM

To shutdown the guest OS from Linux server, you have to install the libvirt. ShutdownAgent calls the virsh to shutdown the running guest OSes.

10.2 Configure ShutdownAgent for KVM

1. Login to the web interface of ShutdownAgent and the account level should greater than or equal to device manager.
2. Goto the Device → Host → Configure web page to enable the **Enable Virtual Machine Shutdown** checkbox then select the **Linux KVM** option.


The screenshot shows the ShutdownAgent 2012 web interface. The browser address bar shows <http://10.0.10.107/home.asp>. The page title is "ShutdownAgent 2012". The system time is "Fri 04/26/2013 AM 10:55:40". The navigation tabs are "Monitor", "Device", and "System". The "Device" tab is selected, and the "Host" sub-tab is active. The "Configure" button is highlighted. The "Control" and "Forward Trap" buttons are also visible. The "Device » Host » Configure" page is displayed. The "Shutdown" section has a "Shutdown Type" dropdown set to "Shutdown". Below it is a table with columns "Enable", "Event", and "OS Shutdown Delay (in seconds)". The table contains four rows: 1. Enable: checked, Event: Power Fail, Delay: 300 second(s); 2. Enable: checked, Event: Battery Low, Delay: 30 second(s); 3. Enable: checked, Event: Overload, Delay: 60 second(s); 4. Enable: unchecked, Event: On Bypass, Delay: 300 second(s); 5. Enable: checked, Event: Smart Shutdown, Delay: 30 second(s). A "Submit" button is at the bottom of the table. The "Virtual Machine" section has a checkbox "Enable Virtual Machine Shutdown" which is checked and highlighted with a red box. Below it is a dropdown menu showing "Linux KVM". The "Additional configuration for ESXi4.1/ 5" section has fields for "VM Server IP Address", "Account", and "Password", with a "Submit" button. The "Source IP" section has a "Receive Trap Port" field set to 162, a "Purpose" dropdown set to "For Redundant (Logical OR)", and a "Submit" button. Below it are fields for "Source Trap IP" (0.0.0.0), "Community" (public), and "SNMPv3 User" (empty). A "Note" states: "Leave the community empty will accept any community string. Leave the SNMPv3 User empty will accept all of the users in the SNMPv3 USM table." Below this is a table with columns "IP Address", "Community", and "SNMPv3 User", containing one row: 1, 0.0.0.0, public. The "Manageable" section has a checkbox "Allow the ShutdownAgent to be managed by an authenticated manager" which is checked, and a "Submit" button. A "Note" states: "The authenticated manager can be a SNMP card or a centralized management software. Enable this option to integrate the ShutdownAgent in the power management environment."

3. Press **Submit** button to update your changes.


11. Work with the SNMP Card

11.1 Legacy Delta InsightPower SNMP Card


1. Open a web browser and connect to the InsightPower SNMP Card.
2. Record the IP address and SNMP Trap Port in the System Configuration web page.

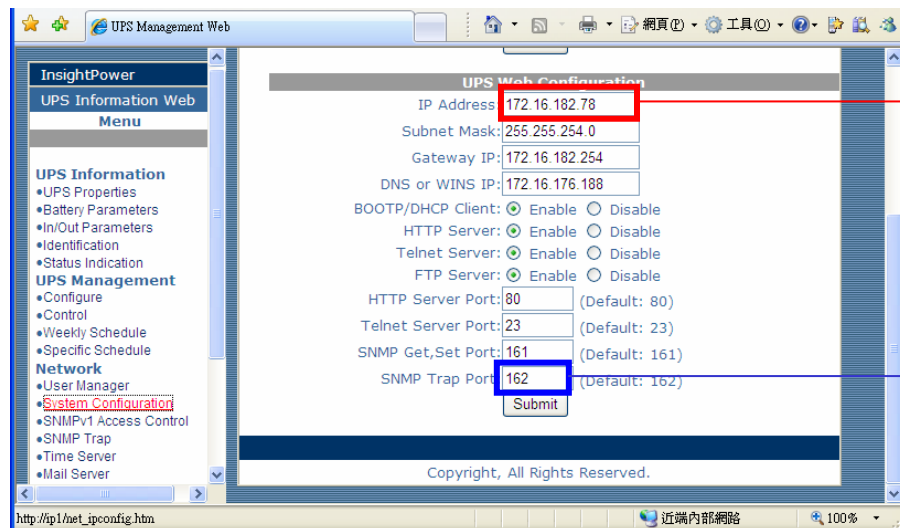


3. Add the SNMP IP address and the trap port to the ShutdownAgent as the following to receive the SNMP trap from the InsightPower SNMP Card.

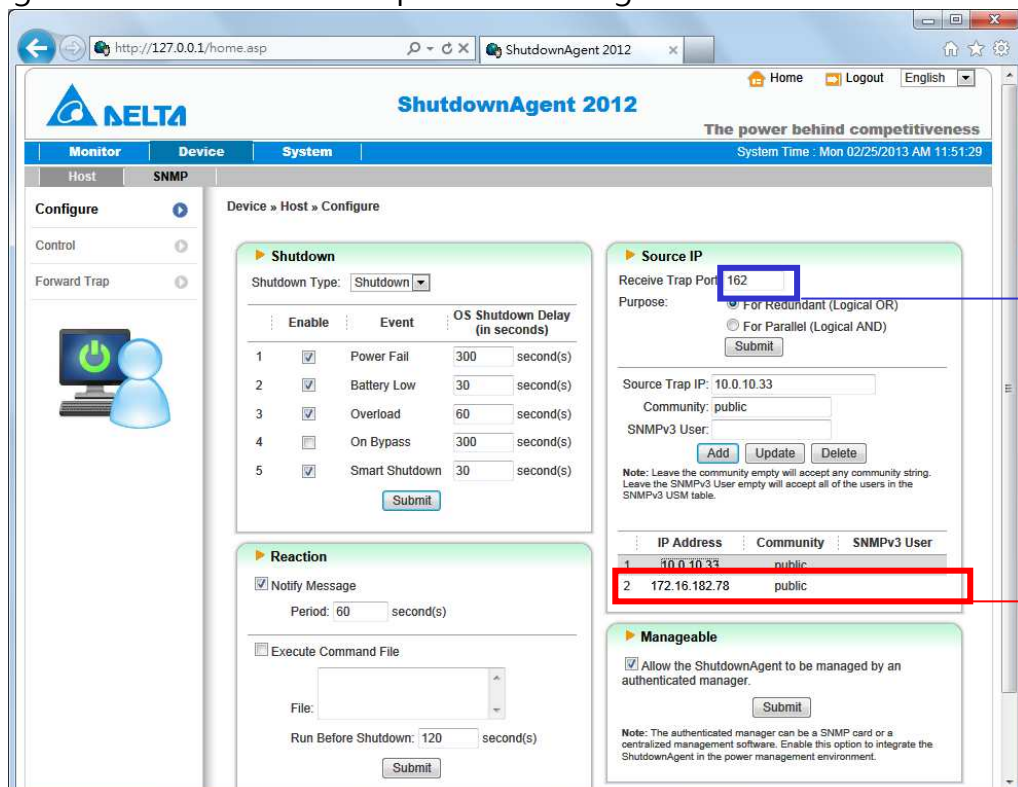

4. Get the ShutdownAgent ip address form the property dialog box.

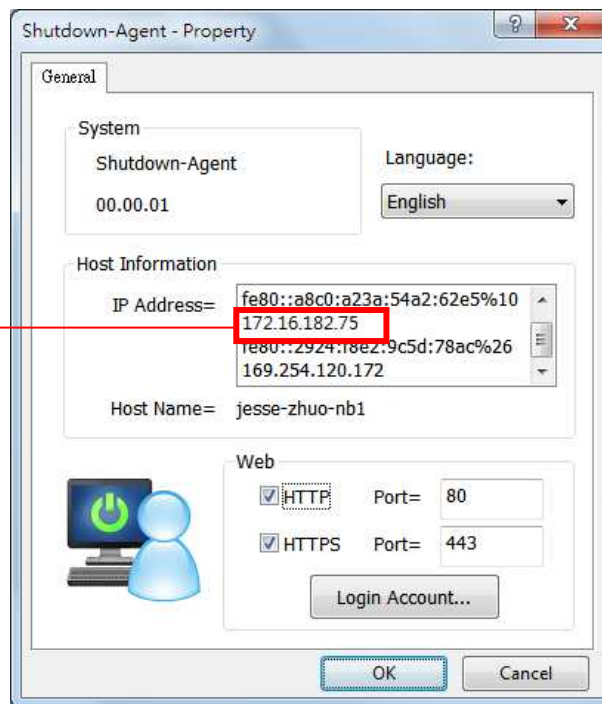


5. Add the ShutdownAgent ip address to the SNMP Trap table in the InsightPower SNMP Card. Please select the "Information" for the Event Level and DeltaV4 as the Trap MIB Type.

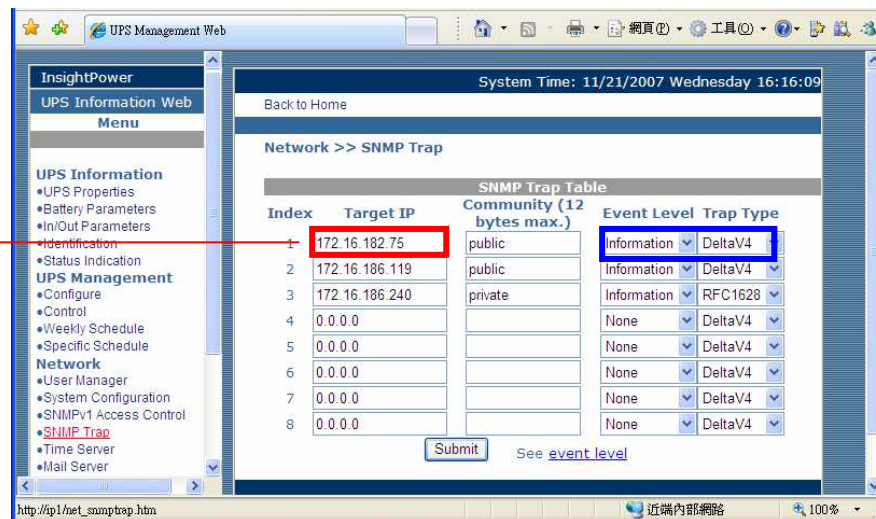


11.2 New Delta InsightPower SNMP IPv6 Card


1. Open a web browser and connect to the InsightPower SNMP IPv6 Card.
2. Record the IP address in the System Configuration web page. The SNMP Trap is assigned in the SNMP Trap web page individually.

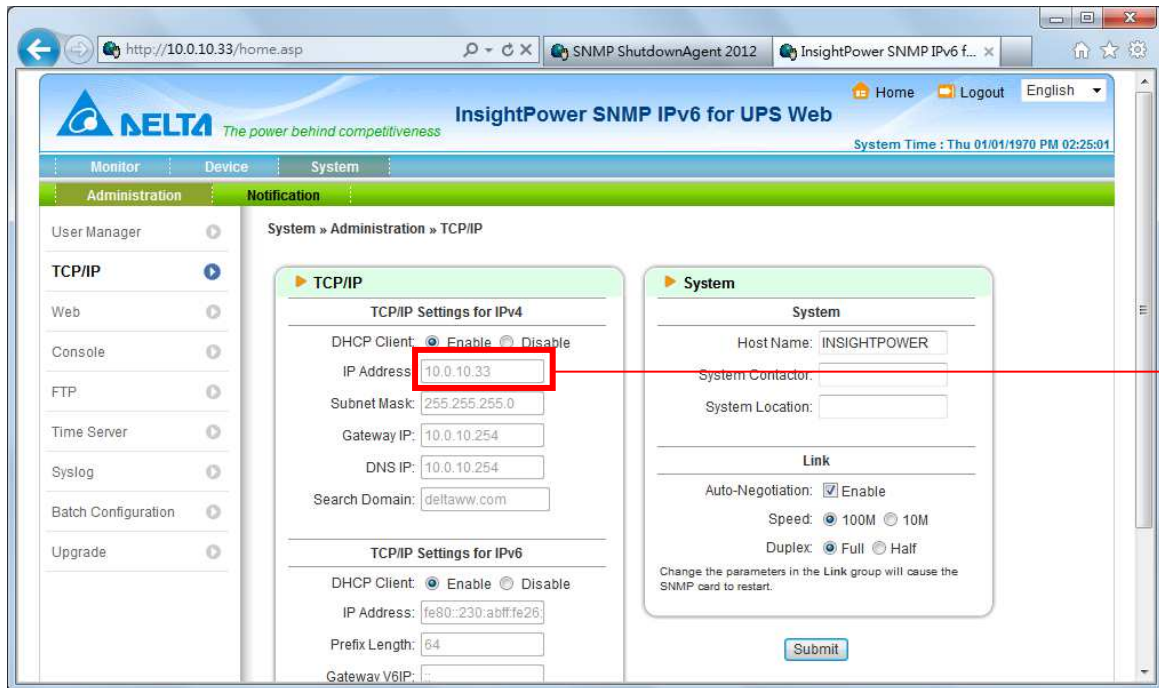


3. Login to the ShutdownAgent web and add the SNMP IP address and the trap port as the following to receive the SNMP trap from the SNMP Card.

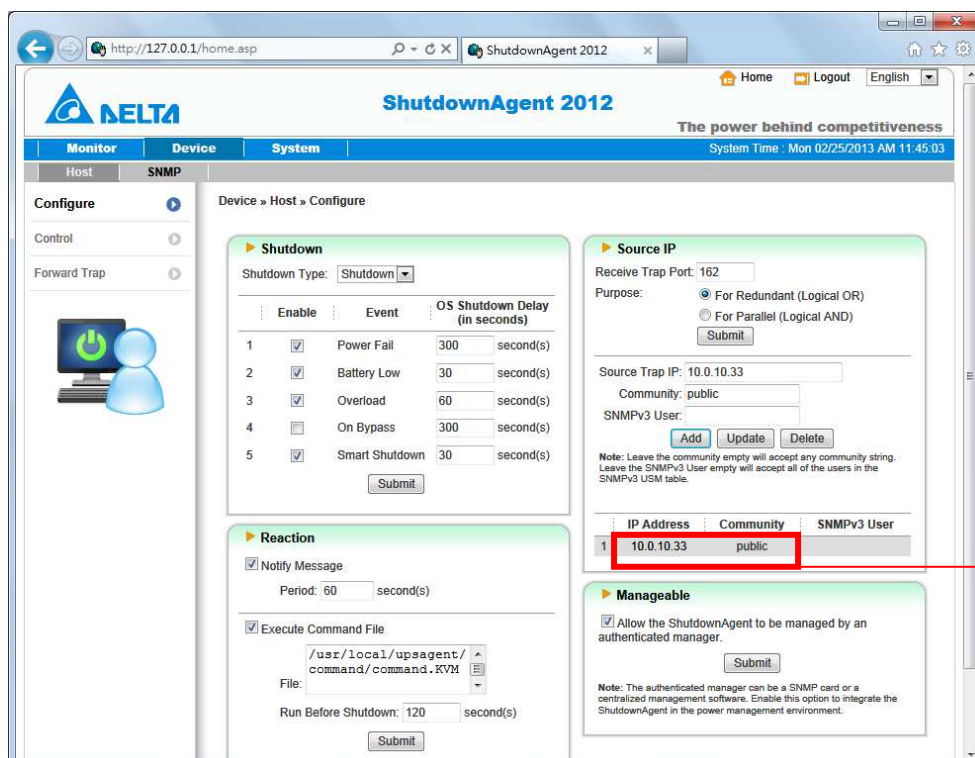


4. Open the ShutdownAgent property from Windows task bar to get the IP address of the server.

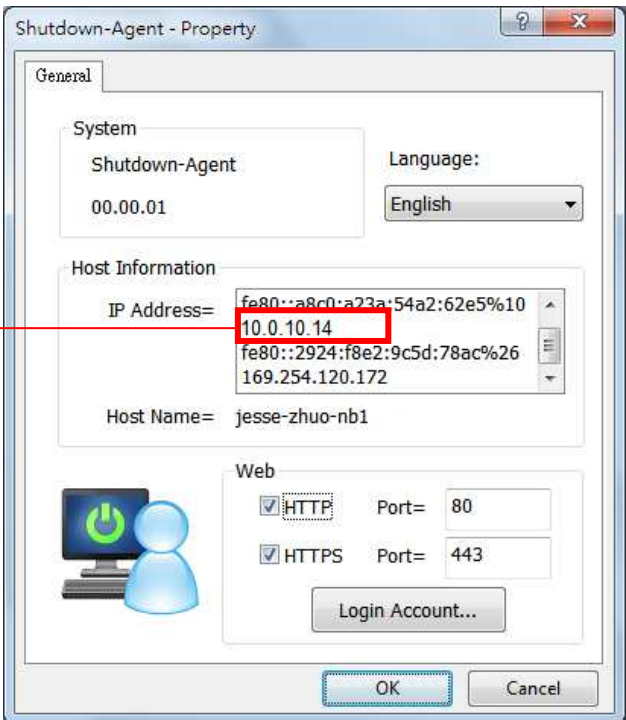

5. Back to the InsightPower SNMP IPv6 card web page, add the IP address of ShutdownAgent to the SNMP Trap table. Please select the "ShutdownAgent 2012" for the Event Level and UPSV4 or UPSv5 as the Trap MIB.

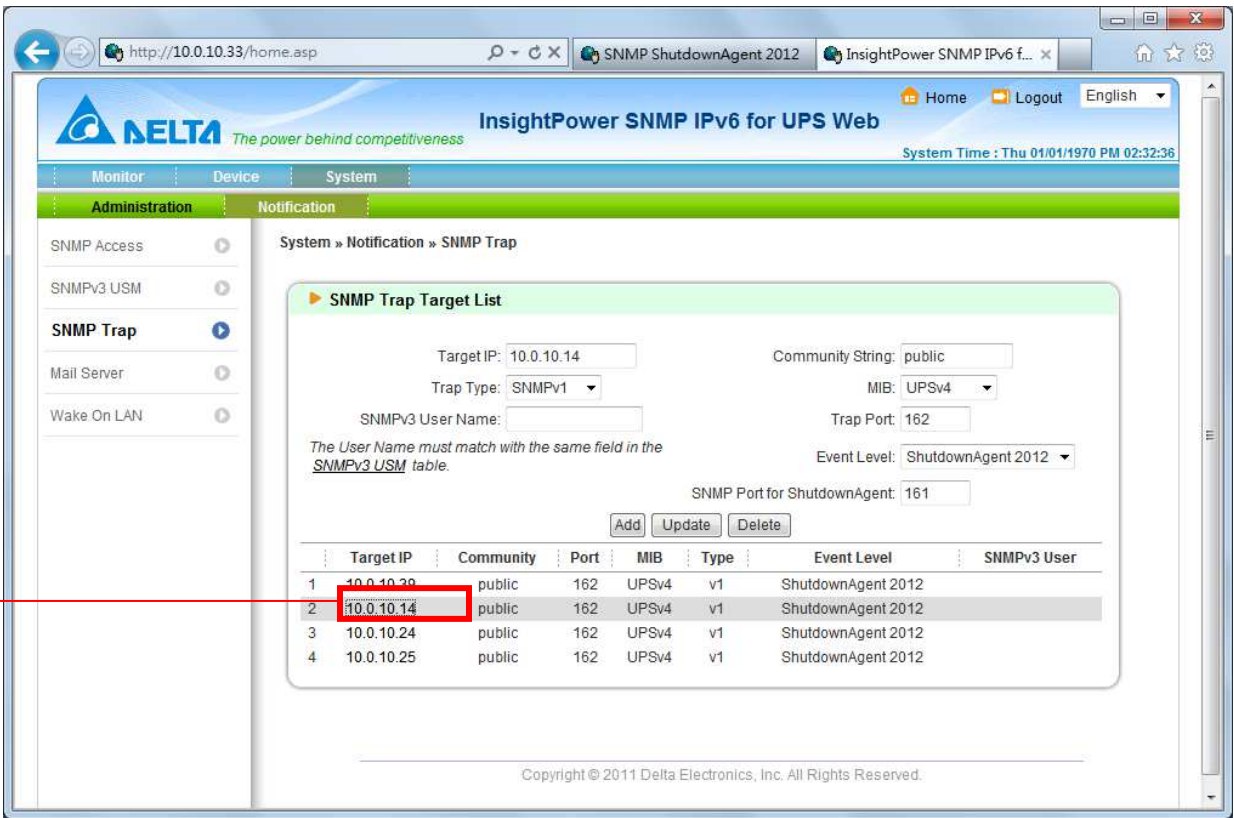

6. If you enable the manageable option in the ShutdownAgent then you can observe all of the shutdown status, countdown timer and shutdown reason from the InsightPower SNMP IPv6 card. The web page is on the Monitor > > Information > > ShutdownAgent.

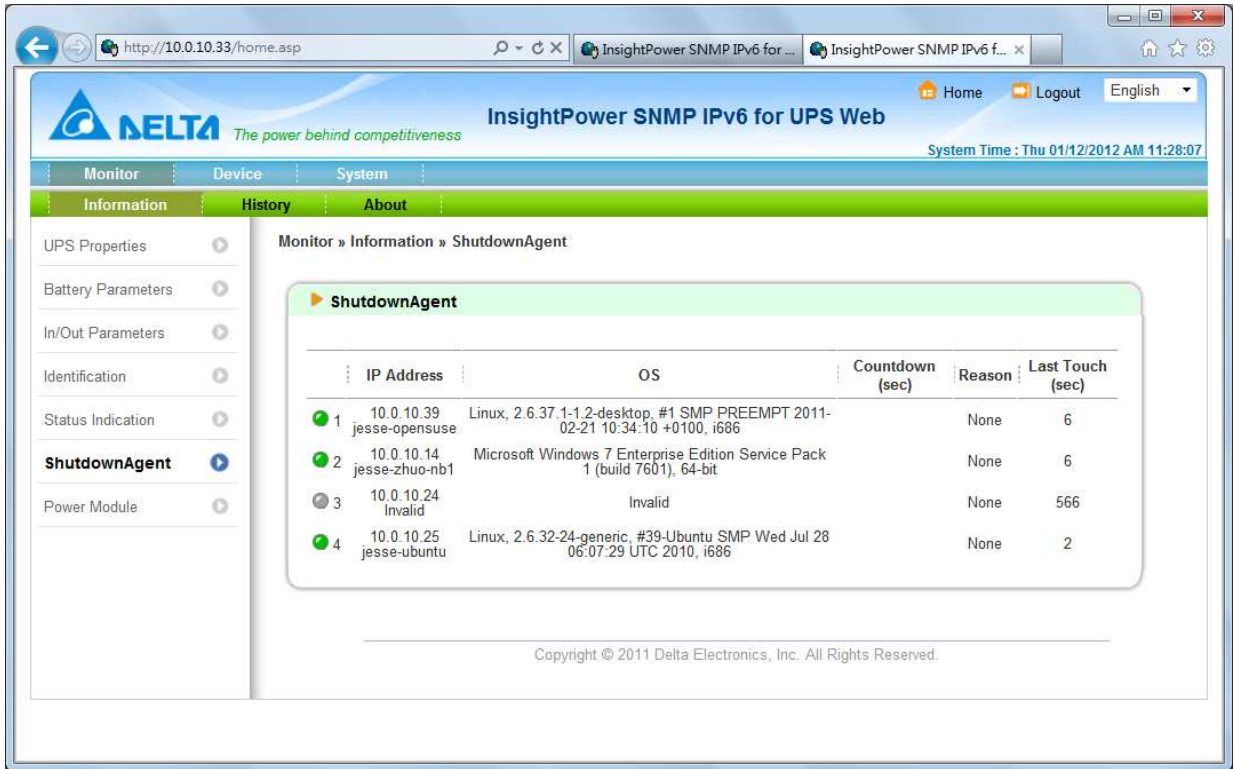

The screenshot shows a web browser window displaying the Delta InsightPower SNMP IPv6 for UPS Web interface. The browser address bar shows <http://10.0.10.33/home.asp>. The page header includes the Delta logo, the text "The power behind competitiveness", and the title "InsightPower SNMP IPv6 for UPS Web". Navigation links for Home, Logout, and English are present. The system time is displayed as "Thu 01/12/2012 AM 11:28:07".

The main navigation menu includes Monitor, Device, System, Information, History, and About. The left sidebar lists various monitoring options: UPS Properties, Battery Parameters, In/Out Parameters, Identification, Status Indication, ShutdownAgent (selected), and Power Module.

The main content area displays the "Monitor » Information » ShutdownAgent" page. It features a table with the following data:

	IP Address	OS	Countdown (sec)	Reason	Last Touch (sec)
1	10.0.10.39 jesse-opensuse	Linux, 2.6.37.1-1.2-desktop, #1 SMP PREEMPT 2011-02-21 10:34:10 +0100, i686		None	6
2	10.0.10.14 jesse-zhuo-nb1	Microsoft Windows 7 Enterprise Edition Service Pack 1 (build 7601), 64-bit		None	6
3	10.0.10.24 Invalid	Invalid		None	566
4	10.0.10.25 jesse-ubuntu	Linux, 2.6.32-24-generic, #39-Ubuntu SMP Wed Jul 28 06:07:29 UTC 2010, i686		None	2

Copyright © 2011 Delta Electronics, Inc. All Rights Reserved.